## QUICK INSTALLATION GUIDE

Read me first!






Make sure the unit is not connected to AC power throughout this process. Remove the mylar sheet underneath the unit to expose the battery connector.






STEP 2

Slide the battery back-up module into the gateway so the connectors line up.

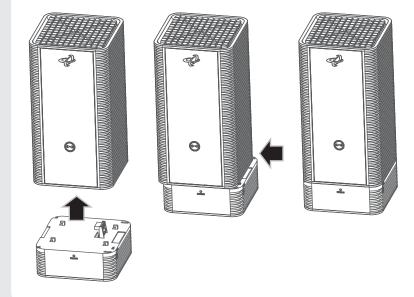



STEP 3

Lock the battery back-up module in place by pushing the switch upwards.

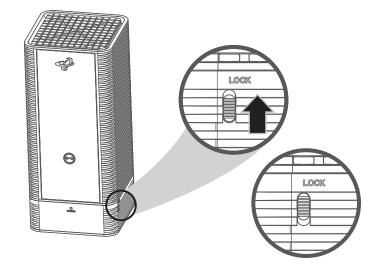

Install the battery by opening up the door under the module, aligning it in the proper direction and then closing the door once more.

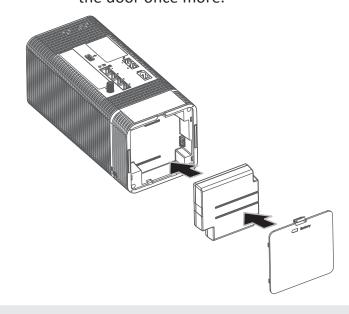

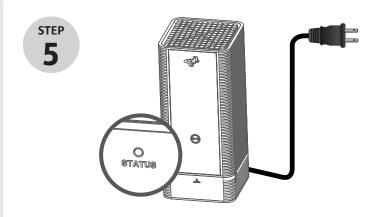

Connect the gateway to a power outlet.

The battery back-up module's LED will act as follows:

Off: Gateway is running on AC power

**Orange - Steady:** Gateway is operating on battery

back-up power

**Orange - Blinking:** Gateway is running on AC power

and is charging the battery

**Red- Steady:** Battery power is low